
WALD MULTI-FIT FRONT BASKET / RACK COMBO

- Fits 7/8", 1" & 1-1/4" Dia Bars
- Comes with metric fasteners
- Basket easily removed for carrying





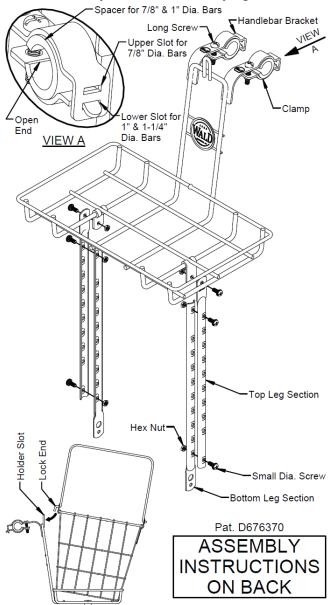

WARNING: This product contains a chemical known to the State of California to cause cancer.

Assembly Instructions:

IMPORTANT

- Use wrench & screwdriver to fully tighten all nuts & screws
- Fasten rack to handlebar with clamps using larger diameter long screws.
 - If mounting to a 7/8" handlebar use the upper slot on the handlebar bracket and if to a 1" or 1 1/4" handlebar, use the lower slot.
 - If clamping onto 7/8" or 1" portion of handlebar, insert rubber spacer as shown in View A with open end towards screw.
- Attach top leg sections (marked "WALD") to leg mounting brackets on bottom of rack with small diameter screws & hex nuts. Loosely tighten.
- Adjust legs to the required length so bottom of rack is fairly level. Put the top leg to the outside & connect top & bottom legs together with smaller diameter screws & hex nuts (as shown).

Note: Use end hole of each leg section & align with adjusting hole in mating leg section. Insert screws through outside of leg with nuts on inside

- When mounting rack legs to axle, install one leg at a time.
 - A. Remove axle nut from one side of wheel.
 - B. Place axle mounting hole (larger hole) on axle.
 - C. Replace axle nut & tighten.
 - D. Repeat steps 4A thru 4C for other side.
 - E. Be sure wheel is aligned properly in fork. If not, loosen axle nut(s), re-adjust & tighten.

Note: If bicycle has a quick-release front hub, see your bicycle dealer for attachment screws & proper mounting.

- Once legs are installed, adjust handlebar bracket so that rack does not rub tire or fender. Bottom of rack should be fairly level.
- fender. Bottom of rack should be fairly level.

 6. Completely tighten all screws & nuts.

The following could result in loss of control & possible injury failure to tighten rack screws & nuts, leg section screws & nuts, wheel axle nuts or failure to have wheel quick-release mechanism properly adjusted.

Please consult a bicycle dealer or your bicycle owner's manual for applicable tightening/adjusting requirements.

Note: Periodically check that all fasteners are tight.

- 7. To attach basket to rack.
 - Hold basket so lock end of handle is toward rack.
 - Set basket down in rack (as shown).
 - Raise handle upright and insert lock end of handle through slot at top of rack.
 - Lay handle down flat to lock.
- 8. To remove basket from rack.
 - Raise basket handle upright.
 - Pull away from rack and lift basket.

.MARNING!

- DO NOT overload Basket/Rack.

Overloading Basket/Rack or not securing item(s) in Basket or on Rack may cause difficulty in steering and/or loss of bicycle control which could result in injury.

- DO NOT bend legs or leg mounting tabs.
- DO NOT mount legs to inside of the bicycle's front fork blades. Mount only to the outside of the bicycle's front fork blades.
- DO NOT assemble a quick-release front hub through leg holes. The legs are to be mounted to bolt on front axles or to fork eyelets.
- DO NOT use on bicycles with carbon fiber front fork or handlebar.
- DO NOT use on bicycles with a front suspension or springer fork.

